

UNIQUE VENDING CARTS

Ice Cream / Popsicle Cart - WCS

INSTRUCTIONS FOR ASSEMBLY AND USE

Tools: one 13mm wrench and a 10mm Phillips Screwdriver

01

With a screwdriver or a coin, press the latch down and open the front cover.




02

Open rear latches of the cover, and remove it, placing it down carefully. Repeat when reloading.



03

Assembly Kit
1- 02 wheels with two bearings each.
2- 02 hubcaps.
3- 02 cotter pins.
4- 02 rings.
5- 01 handlebar.
6- 02 knobs.
7- 01 stand.
8- 01 display stand
9- 01 trash bin.

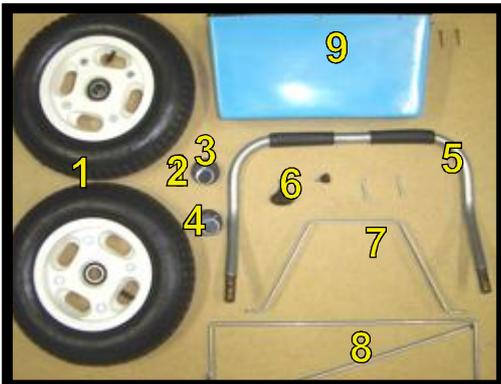

04

Place protection on floor and tilt cart backwards until it stands upright on handlebar base.



05

Position the stand as pictured, coinciding with screw openings on opposite sides. Place one screw and tighten manually.



06

Place the second screw, tighten it by hand. Finish by tightening them firmly with 13mm wrench.



07

Put the wheel as explained in the sheet "instructions for wheels assembly".



08

Return the cart to a horizontal position and using the Phillips screwdriver and screws from kit, attach the trash bin onto the plastic sleeves.



09

Gently tighten the screws of the trash bin to avoid stripping the plastic sleeves.



10

Place bases for the display and the umbrella noting that the smallest goes on the left side.



Ice Cream / Popsicle Cart - WCS


11

Place the knob for the umbrella on the right side and leave it tightened if not in use.



12

First insert the display rod (1) and tighten the knob. Then place the display (2) and twist clockwise until tight.

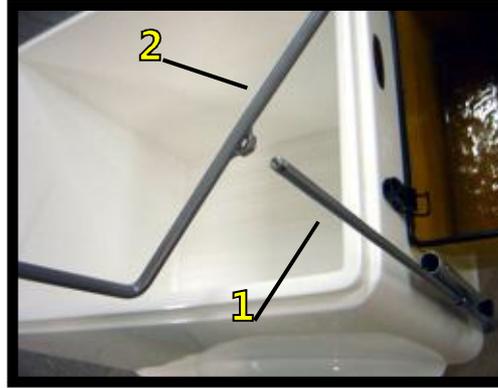

13

Insert handlebar into bases as shown. Find screw openings and insert screws from the kit.



14

Place the nuts on opposite end of screw and using a 10mm wrench, tighten firmly so the handlebar is not loose.



15

Place the large cold plates first, keeping the lateral protrusions (1) visible and caps facing up.



16

Place side cold plates noting that the beveled sides should be inserted over the protrusions of the large plates.



17

Once smaller side plates are positioned, fit the frame as shown over the lateral plates to maintain them in place.



18

Load cart with desired product and close immediately following steps 01 and 02.



Maintenance tips:

- Use automotive shampoo to clean the fiberglass.
- In addition, use automotive wax to protect fiberglass and polish with a flannel cloth.

TECHNICAL DATA

Width	700 mm / 27.5in
Height (without handle)	790 mm / 31.1in
Length	910 mm / 35.8in
Total net weight	65.0 kg / 143lbs
Maximum payload.....	60.0 kg / 132lbs
Eutectic (cold) plates	6 pc

Images used for illustration purposes only
THE MANUFACTURER RESERVES THE RIGHT TO CHANGE
THIS PRODUCT AT ANY TIME WITHOUT NOTICE.